

Tefal | Variabolo & Kids bottle

INSTRUCTIONS FOR USE | NOTICE D'UTILISATION



**REMOVABLE
PARTITIO**
CLOISON
AMOVIBLE



**OPEN ON BOTH
SIDES**
OUVERT DES
DEUX CÔTÉS



 
**DISHWASHER-
SAFE**
COMPATIBLE
LAVE-VAISSELLE



STACKABLE
EMPILABLE



SAFETY INSTRUCTIONS | INSTRUCTIONS DE SÉCURITÉ



DE Vor Gebrauch reinigen.

EN Clean before use.

FR Nettoyer avant l'utilisation.

IT Lavare prima dell'utilizzo.

ES Limpiar antes de usar.

NL Vóór gebruik reinigen.

SV Rengör före användning.

CS Před použitím vyčistěte.

DA Skal rengøres før ibrugtagning.

UK Перед використанням очистити.

PL Przed użyciem umyć.

RO Curățați înainte de utilizare.

 
 
BG Да се почисти преди употреба.

SK Pred použitím očistite.

NO Rengjøres før bruk.

SL Pred uporabo očistite.

ZH 使用前请先清洗。



DE Vor Gebrauch reinigen.

EN Clean before use.

FR Nettoyer avant l'utilisation.

IT Lavare prima dell'utilizzo.

ES Limpiar antes de usar.

NL Vóór gebruik reinigen.

SV Rengör före användning.

CS Před použitím vyčistěte.

DA Skal rengøres før ibrugtagning.

UK Перед використанням очистити.

PL Przed użyciem umyć.

RO Curățați înainte de utilizare.

BG Да се почисти преди употреба.

SK Pred použitím očistite.

NO Rengjøres før bruk.

SL Pred uporabo očistite.

ZH 使用前请先清洗。